



How to Set Up the EZCloud Function on Unicorn?

Title	How to Set Up the EZCloud Function on Unicorn?	Version:	V1.1
Product	Unicorn	Date	9/26/2023

How to Set Up the EZCloud Function on Unicorn?


Description

Note: This method is applicable to most of the scenarios. If the method still cannot solve your problem, it is recommended to consult our Tech Support Team.

https://global.uniview.com/Support/Service_Hotline/

Preparation


Unicorn needs to be connected to the internet. Please make sure that the IP address of Unicorn is in the same network segment of the router.

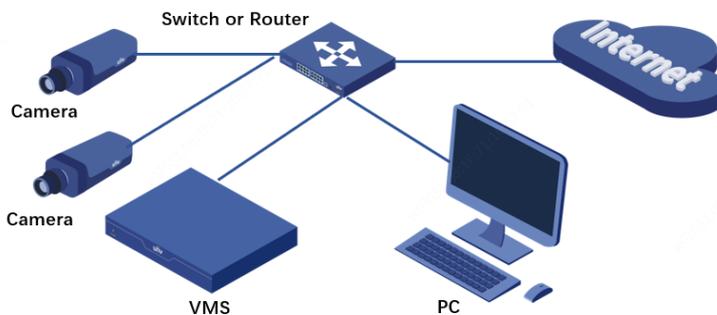


Operating Steps

Step 1 Connect your Unicorn to the router and ensure that the IP address of the Unicorn is in the same network segment with your router.

Step 2 Turn on the EZCloud function from the Unicorn's web interface under **System>Network>EZCloud**.

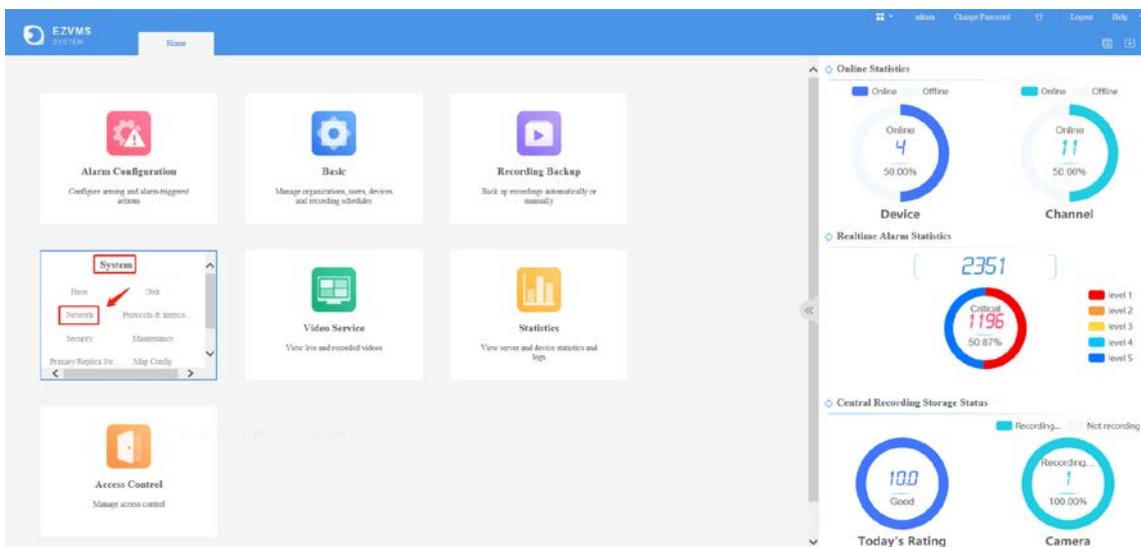



Title	How to Set Up the EZCloud Function on Unicorn?	Version:	V1.1
Product	Unicorn	Date	9/26/2023

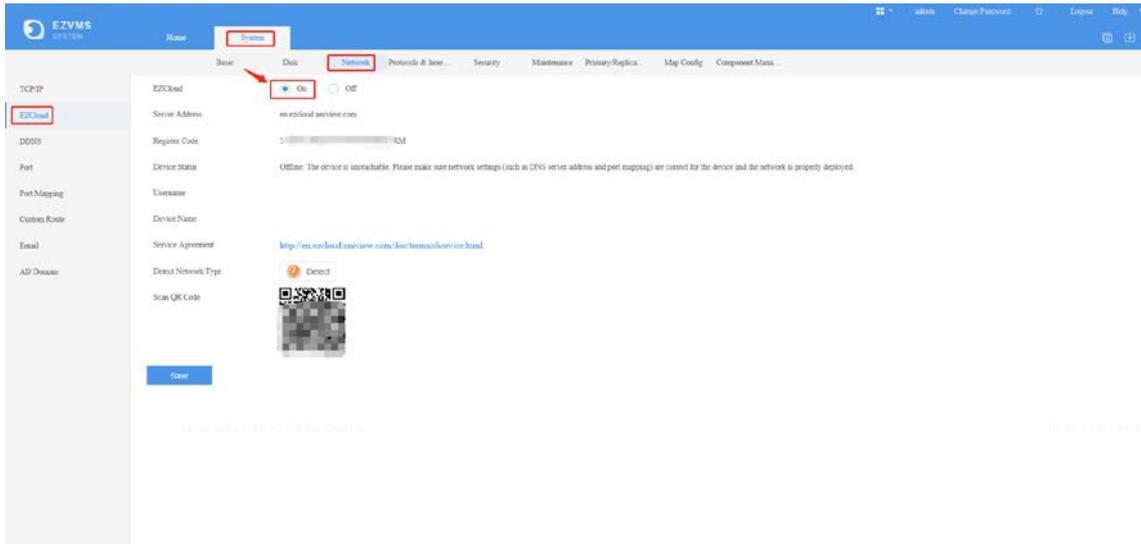



Step 3 Scan the QR Code on the EZCloud page to download and install the mobile app if you wish to check the device on your cellphone as well.

Step 4 Sign up an EZCloud account on EZView and log in to add the Unicorn to your cloud account.

Step 5 Go to **Devices>Add>Scan** to scan the QR code on the EZCloud page to add the device. Enter a name for your device and then click start live view or  on the top right side.

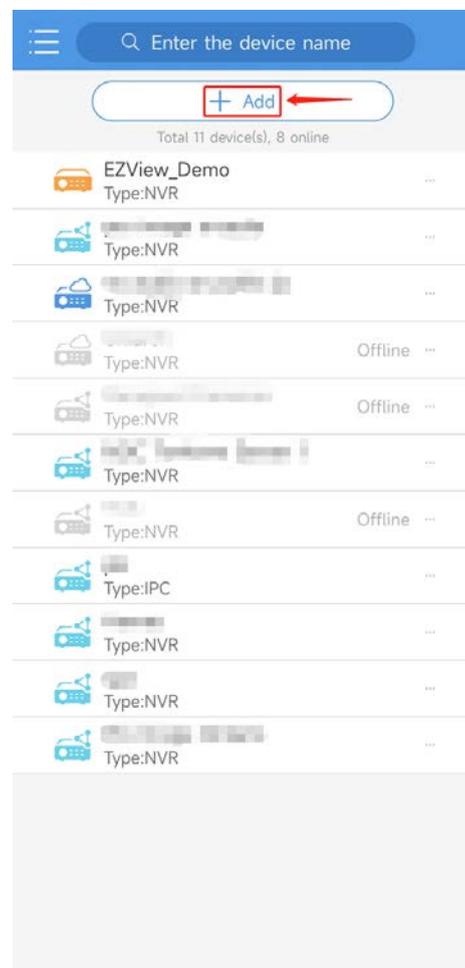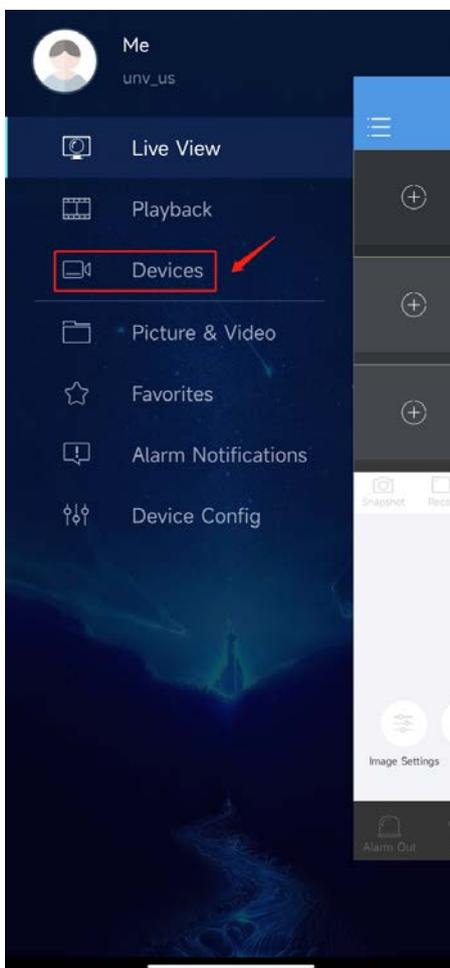

Title	How to Set Up the EZCloud Function on Unicorn?	Version:	V1.1
Product	Unicorn	Date	9/26/2023

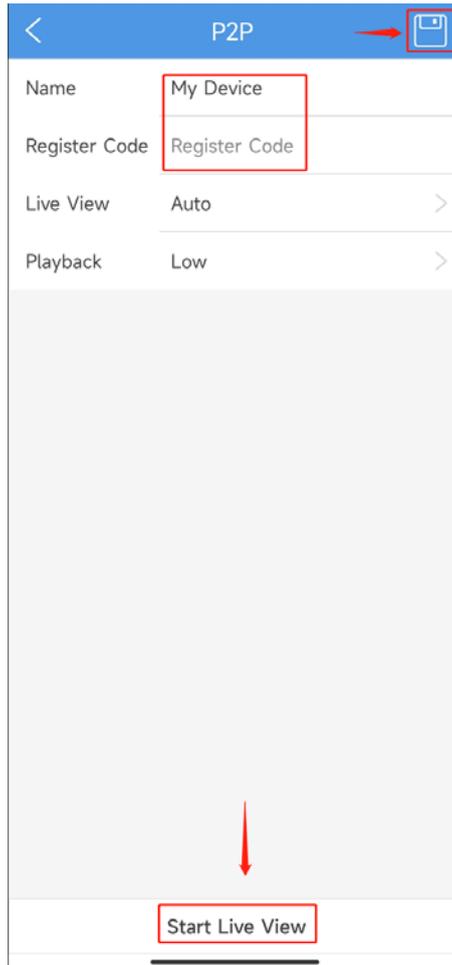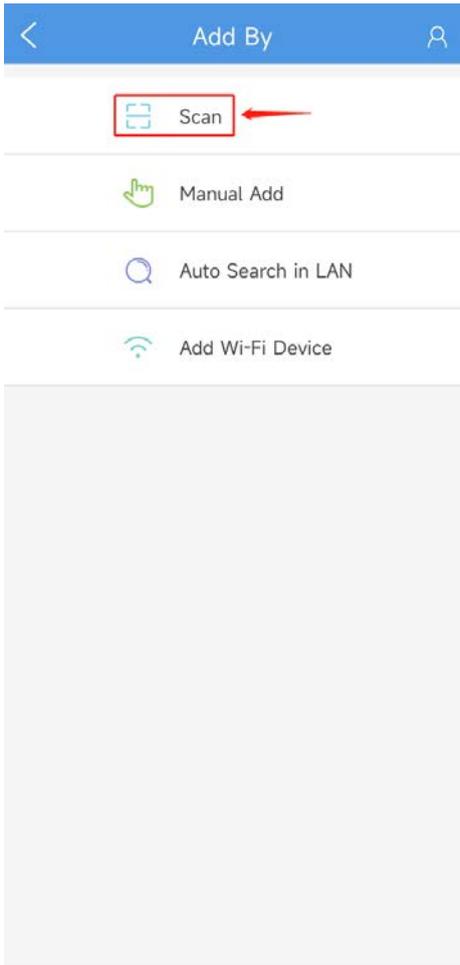

Note: It may take some time for a device to connect to the cloud. If it fails to start a live view on the app, please wait for 2 minutes and check again. You can also pull down and release to refresh the device list and then click the device to start the live view again.